

LOWERING AND RAISING COLUMNS P


Designed for mounting on tennis courts, ski areas, car parks, gardens, residences, roadway junctions, airports, platforms, bridges and for difficult access areas.

Advantages:

- possibility of safe changing/maintenance of luminaire, camera, floodlight from ground level,
- low cost of maintenance accessories mounted on the top of the column,
- easy and safe way of lowering and raising column which can be made by one person only,
- słup kładziony prostopadle do wnęki, w jej stronę.

Technical information for lowering and raising columns SAL-.../P:

- inclination angle of column: from 0° to 90°,
- manual lowering and raising of column.

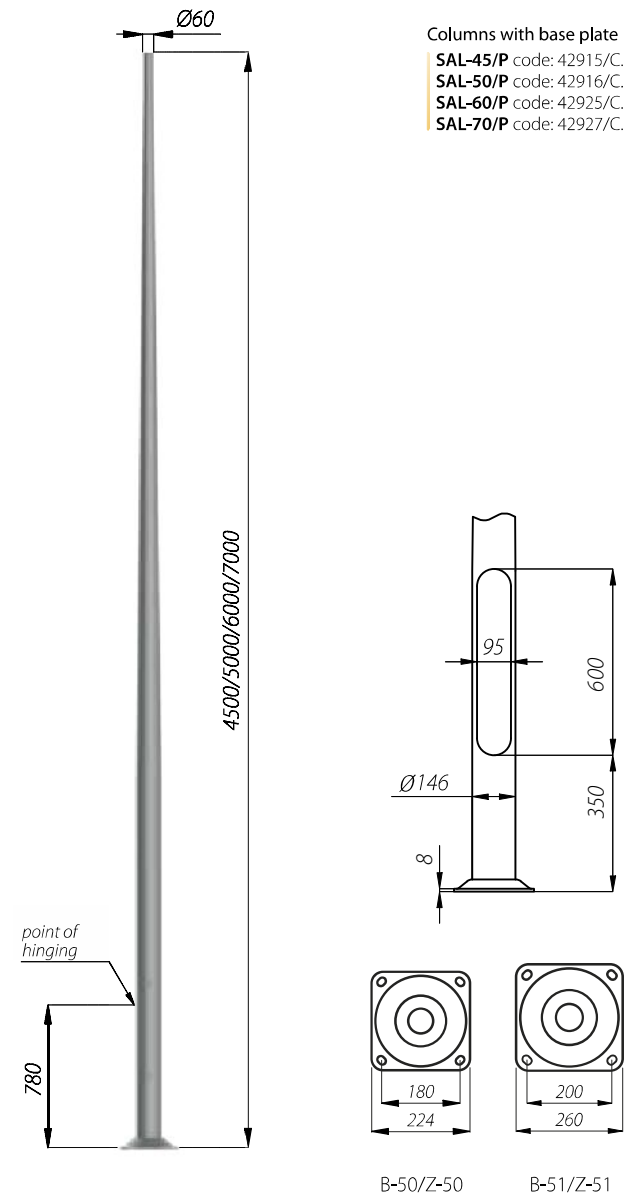

LOWERING AND RAISING COLUMNS P



Column diagram of column SAL-../P:

1. Remove door
2. Remove hinge securing bolt
3. Hold column and pull out hinge safety pin
4. Manually lower column
5. Install/ maintain the luminaire
6. Manually raise the column
7. Replace hinge safety pin and securing bolt
8. Refit column door